

•••• Instructional Guides

Deck Oven

Deck Oven

Model Name

DHO2-43 (4 Sheets 3 Phase)

DHO2-33 (3 Sheets 3 Phase)

DHO2-23 (2 Sheets 3 Phase)



Preparation

Precautions for Safety

Structure and Name

Operation Sequence for Oven Controller

Instruction for Installation

Solutions for Failure or Malfunction

...

▶ Read this user manual before use.



Connect the power unit to ground.

If you do not connect the ground, there is a risk of electric shock.

When you open the power switch box, be sure to turn off the power.

If you do not turn off the power for the cleaning or repair, there is a risk of electric shock.

Avoid contact with water for the main body of oven. This may cause electric shock or malfunction.



Avoid direct contact with the hand when using the oven.

The temperature is high near the door; thus, there is a risk of burns.

When cleaning the glass doors, make sure to lower the temperature.

Make sure to turn off the power and lower the temperature when replacing the light.

Please use steam and shut the water supply valve upon termination of work.

Please open the oven door to dry the moisture inside.

Please do not place anything or work on top of the oven.

Structure and Name



1 Method for Setting Temperature (Upper and Lower)

Pressing (key on TOP (upper heat) display unit will blink the setting display unit. At this time, pressing M key after entering the set value using \triangle ∇ key will allow you to set it. You can set the temperature of lower heater in the same way as the upper heat.

② Method for Heat Capacity (Upper and Lower)



Pressing POW key at the top and bottom will display numbers. You can use these numbers to set your desired heat capacity.

- You can manage the temperature in accordance with the user's manual for electric deck oven) by adjusting heat capacity through using POW key when the temperature is higher than the set value.

3 Method for Setting Time

TIMER

1) Set the time by pressing \triangle or ∇ key.



2) Press Start key after setting will blink decimal points and operate the time.

H(분) M(초) 3) After the set time elapsed, the buzzer to inform the completion will be operated. At this time, the buzzer will be turned off by pressing Start key.

4 Instruction for Use of Key

You can set the time and upper and lower temperature in the menu. You cannot modify the set value for the operation time by the menu key during operation. If you want to modify the menu during operation, then you should press your desired Memory key by pressing the menu key after pressing Start key. Pressing the Memory key for 5 seconds after setting the temperature and time after selecting your desired menu from the menu keys from 1 to 4 will allow you to set the temperature and time with beep sound.

▶ Structure and Name

(5) Instruction for Use of Steam

Press the steam key will spray the steam and continue to spray the steam during the key pressed(30 seconds at maximum at each press time). When you use the steam function for the first time, you should use it after 10 minutes at least. Steam only can be used when the upper heat temperature is 150 degrees or higher.

(6) Instruction for Use of Lighting

Pressing - key will turn the light on and off.

7 Power ON / OFF

Pressing Power key will turn the power on. Pressing the power for 5 seconds will turn the power off.

8 Instruction for Use of Oven Reservation Feature

window.



Setting the oven reservation can be done only in Menu 1.

Pressing the keys will simultaneously allow you to set the time on the

E.g.: If you want to pre-heat the oven after 10 hours, you should press the start key after setting the time using $\bigcirc \bigcirc \bigcirc$ key . After then, LED will blink in the time window and the reservation feature will be operated and the pre-heating for the oven will begin after 10 hours.

4

Daehung Softmill Co., Ltd.

Head office: S-11, 8F Garden 5 Tool, 10 Chungmin-ro, Songpa-gu, Seoul

Phone: +82 2 445 2040 FAX: +82 2 404 2789

Factory: 276, Dongmakgol-gil, Chowol-eup, Gwangju-si, Gyeonggi-do

Phone: +82 31 762 2045 FAX: +82 31 762 1915

A/S Call Center: +82 1588 4891 Homepage: www.softmill.co.kr